


Connecting to a Wireless Network

In order to place calls or perform updates, your Poly Edge E phone must be connected to the internet via ethernet or Wi-Fi. Follow the steps below to connect your Wi-Fi-enabled phone to your wireless network.


ENABLE WI-FI

Before you can connect to a wireless network, you must enable Wi-Fi on your phone.

1. Press the **Home** button.
2. In the **Main Menu**, select **Wi-Fi**.

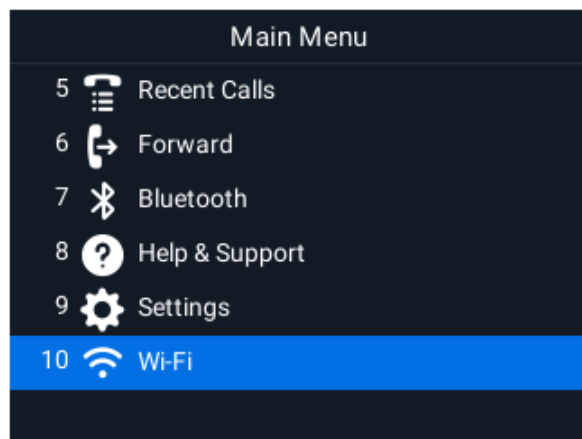

3. Press the **Select** key to enable Wi-Fi, and then press **Save**.

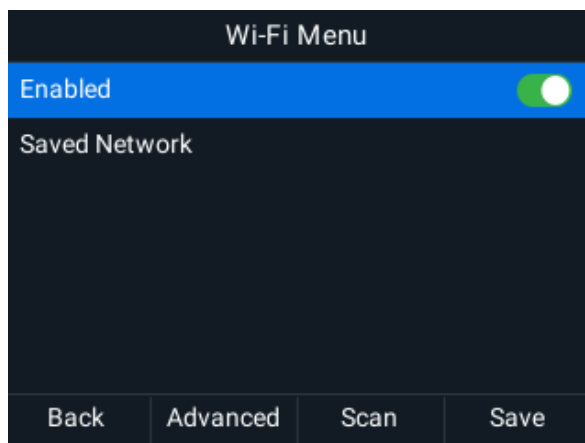

4. Press **Reboot**. After the phone reboots, it can connect to a wireless network.

CONNECT TO A WIRELESS NETWORK

Once Wi-Fi has been enabled on the phone, more options will be available in the Wi-Fi menu.

1. In the **Wi-Fi** menu, press the **Scan** soft key.
2. Use the **Up and Down navigational keys to select your network's SSID**.
3. Press the **Connect** soft key.
4. In the **Passphrase** field, use the dial pad to type in **your internet network's password**.
5. Once you have entered the password, press the **Connect** soft key.

